







FITTING INSTRUCTIONS

(INCLUDING SPECIFIC OPERATING PRESSURES)

CR5075HP



-  This air suspension system is designed to assist the original vehicle manufacturer's suspension – it is not meant to carry the entire rated load. We do not recommend that the coil springs be altered from the OEM suspension specification, unless an applicable commercially available suspension kit is fitted.
-  The kit is designed to suit a standard vehicle configuration – modifications to the vehicle outside the kit design parameters may adversely affect fitment and operation such as:
 - Height changes outside any noted in the kit specification.
 - Larger dampers (Shock Absorbers)
 - Wheel and tyre changes
 - Exhaust changes.
-  If your vehicle is fitted with a brake proportioning valve or stability control system, it is important to ensure this is maintained and adjusted according to the vehicle manufacturer's instructions.
-  It is recommended that only a properly qualified person installs the product and carries out maintenance. If you are not qualified and attempt to carry out such work, ensure that all safety equipment is used, and safety standards are met.
-  Ensure that you have read the full Product Manual before attempting to fit the product.
-  Ensure the Product Manual is kept with the vehicle and that any vehicle owner and/or operator is fully advised on the system and its operation before attempting to drive or operate it.



SEE OTHER WARNINGS AND IMPORTANT INFORMATION IN THE PRODUCT MANUAL


LHS = LEFT SIDE OF THE VEHICLE WHEN FACING FORWARD

STEP 1 - AIR LINE TUBING & FITTINGS - GENERAL NOTES

CUTTING

Only cut the airline tubing with a sharp blade making the cut as square as possible.

Always trim the tubing before re-inserting into the fitting.

-  If you use a sharp utility knife or razor blade great care must be taken in all cases not to cut yourself during this operation.

CONNECTING & REMOVING

To connect:


Push the freshly trimmed tubing into the fitting as far as possible.

To remove:


First release the air pressure from the system. To withdraw the tubing, push and hold the collar on the fitting away from the tube and pull out the tubing.

Hint In confined spaces an open-ended spanner can be used to evenly depress the collar and remove the airline tubing.

**CUT TUBING
SQUARE WITH
SHARP BLADE
OR TUBE
CUTTER**

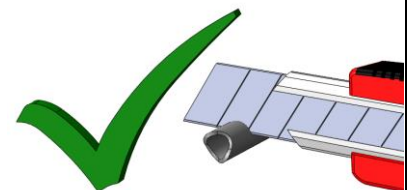



**DO NOT USE
PLIERS, SIDE
CUTTERS OR
PIPE CUTTERS**

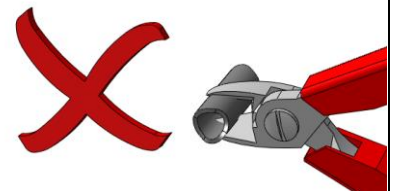

STEP 2 - POSITION YOUR INFLATION VALVES

Select a convenient location for the air inflation valves such as the bumper or the body of the vehicle. It must be protected from road damage and be accessible for air inflation equipment.

Drill a 5/16" hole and install the air inflation valve using two 5/16" stainless steel washers as supports where required.

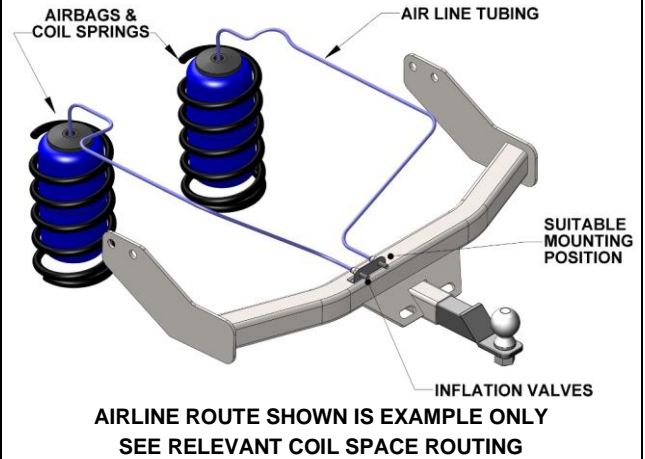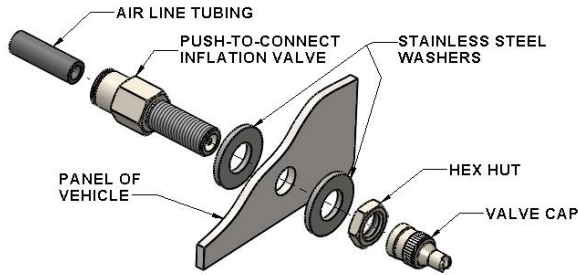

STEP 3 - PREPARE THE AIR LINE TUBING

The air line is supplied with split protector tube pre-fitted to shield the air line during and after installation. Decide on a suitable route for the air line from the airbag to the inflation valve location to avoid direct heat from engine, exhaust pipe, and away from sharp edges.

Uncoil the air line tubing being careful not to fold or kink it and cut to length to suit the chosen route. Once routed, the protector tube is pulled back later to prepare the protected air line.

DO NOT CONNECT OR SECURE THE AIR LINE AT THIS POINT



STEP 4 - ADD THE HIGH PRESSURE SLEEVES

IMPORTANT: Complete initial airbag and sleeve inflation at ride height. This will allow the airbag and sleeve to mate together in the correct suspension position.

Fit the elasticated tapered end of the High Pressure sleeve over the airbag and slide the High Pressure sleeve over the airbag as shown. The High Pressure sleeve is to be positioned with the tapered ends neatly over the upper and lower shoulders of the airbag as shown.

Note: Fitting airbags with high pressure sleeves will increase the material thickness to be inserted into the coil. Airbag Man recommend coil isolators be removed to help with airbag and sleeve installation.



STEP 5 - PREPARE THE VEHICLE

To fit this kit, the coil springs need to be removed. Ensure this operation is carried out according to the vehicle manufacturers' instructions.

STEP 6 - DRILL LOWER SPRING SEAT

Drill the lower spring seat with a 12-13mm bit, remove all burrs. This is to allow the air line tubing to exit the spring seat in a rearward direction. The air line and protector can now be inserted through this hole.

NOTE: Ensure that the protector is fed through the hole. The air line will be at an angle and will be damaged if the protector is not in place.



STEP 7 - INSERT AIRBAG INTO COIL SPRING

Insert the airbag into the coil spring with the air inlet at the bottom. Ensure that the airline fed through the coil for inflate and test is not kinked or crushed when feeding the airbag into the coil space.

STEP 8 - DRILL LOWER SPRING SEAT

Take one of the hollow supports, CC1010, and insert it into the top end of the coil spring so when the coil spring is re fitted the cup sits over the upper spring seat node as shown.



STEP 9 - COIL SPRING RE FITMENT

Re-position the coil spring on the vehicle whilst feeding the air line tubing through the lower spring seat hole drilled earlier. Ensure the coil orientation is correct, and the air line tubing does not get kinked during this process.

STEP 10 - RED PLUGS


Use of the red plugs supplied is optional. They will enable a general reduction in airbag size which may be required to ease an airbag into a coil spring which is out of the vehicle, and they will fully flatten an airbag for easy insertion into an in-situ extended coil spring through the winding.

USING RED PLUGS: Flatten the airbag with the airline fitted and plug the other end of the airline tubing with the red plug. The airbag should now remain flattened whilst you perform fitment into the coil spring.



STEP 11 - POSITIONING THE PROTECTOR

Position the air fitting protector so that the so that the chamfered hole is facing the air fitting on the airbag, as shown.

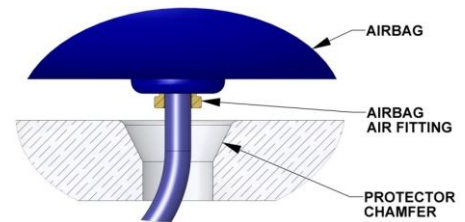

STEP 12 - ROUTE AIRLINE TUBING

Route the airline tubing from the airbag to the inflation valve ensuring the airline can freely move with the suspension whilst not placing pressure on the air fitting, allowing for the full movement of the suspension.

STEP 13 - HEAT SHIELD LOCATIONS

Due to the shape of the exhaust system, two heat shields are supplied to protect the bellows from radiated heat where the exhaust passes closest to the coil.



STEP 14 - PREPARE HEAT SHIELD

Select a heat shield from the kit and bend the legs as shown, bending by hand is OK. Offer up the heat shield to the position where the exhaust pipe passes closest to the airbag, and, if necessary, bend the shield to the exhaust shape.

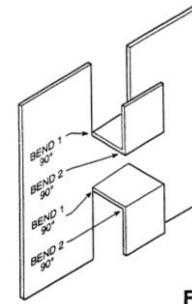


Figure "A"

STEP 15 - START HEAT SHIELD CLAMPS

Select two work drive clamps from the kit, and undo them completely, then slip over the pipe and re-start. Position the clamps so that you can do them up to hold the shield, as shown,

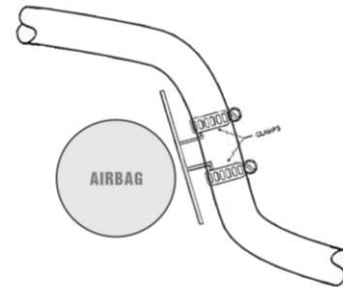


FIGURE "B"

STEP 16 - FIT HEAT SHIELD

Fit the heat shield to the pipe using the clamps and position the shield to provide an air space between it and the pipe, whilst protecting the airbag.

⚠ Exhaust modifications from standard or incorrect fitment can cause eventual heat damage issues.

- Should you have the exhaust system modified this may result in increased heat exposure to the airbags, which may reduce the life span. Please contact Airbag Man before any exhaust modifications are carried out.

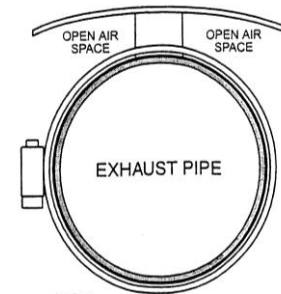


Figure "C"

Repeat this process for the second heat shield.

STEP 17 - CONNECT AIRLINE TUBING AND TEST CONNECTIONS

CONNECT the airline tubing by inserting one end into the airbag air fitting, the other end into the installed inflation valve.

Hint Flat nose pliers may be used to lightly grip the airline tubing to ensure it is fully inserted into the airbag fitting.

INFLATE the airbag to the maximum allowed pressure (See Specific Operating Pressure Advice attached) and check for leaks at the connections using soapy water spray. We recommend a soapy water spray solution of 25% soap to 75% water.

DEFLATE the airbag. If no leak, continue. If leak detected, remove the airline tubing, re-cut and re-test.

CHECK airbag is not in contact with any sharp edges or is too close to exhaust heat in all load and height conditions.

STEP 18 - HIGH PRESSURE SLEEVE POSITIONING

Once the airbag and high pressure sleeves are in the coil spring it is recommended that you visually inspect to ensure correct positioning. You can work the high pressure sleeve around the airbag so that it is as even as possible prior to inflating the airbag.

STEP 19 - INSTALL COMPLETION

Return the vehicle to driving position. Ensure this operation is carried out according to the vehicle manufacturers instructions.

STEP 20 - TO FINISH

Ensure the **WARNING** label is fixed in a prominent position in sight of the vehicle operator.

Ensure the Product Information Wallet is given to the vehicle owner/operator.

Ensure the vehicle owner/operator fully understands how to use the product.

All fixings should be checked for tightness after the first laden run and thereafter as per the original manufacturer's recommendations.

SPECIFIC AIRBAG OPERATING PRESSURES

See operating instructions section for proper use and apply the specific pressures below:

<u>STANDARD KIT</u> <u>WITHOUT HP SLEEVES</u>	<u>HIGH PRESSURE KIT</u> <u>WITH HP SLEEVES</u>
<u>MINIMUM</u> 5 PSI (0.4 bar)	<u>MINIMUM</u> 5 PSI (0.4 bar)
<u>MAXIMUM</u> 30 PSI (2.1 bar)	<u>MAXIMUM</u> 60 PSI (4.1 bar)

Adjust and maintain pressure up to the stated maximum to level the vehicle for the load imposed and always maintain the minimum airbag pressure.

Failure to do so may result in product or vehicle damage not covered under warranty.

**IF MORE PRESSURE IS REQUIRED TO LEVEL THE VEHICLE
CALL AIRBAG MAN ON 1800 247 224 FOR FURTHER TECHNICAL ADVICE**



FREECALL 1800 247 224



⚠️ Incorrect use of this air suspension product can result in damage to the airbag, associated parts and/or the vehicle, which is not covered under warranty.

⚠️ Ensure the airbags are maintained at the stated ride height at all times and the maximum pressure is never exceeded.